



MULTIPURE™

wriggle™

Bottle & Filter Instructions

Instructions for Initial Use

1. Unscrew the cap from the bottle.
2. Remove the filter from the cap and set aside.
3. Wash the cap and bottle. The wriggle cap and bottle can be washed by hand or in the top rack of a dishwasher.
4. Reconnect the filter by pushing and rotating it into the cap. Make sure that the rounded filter end is toward the cap nozzle. You may hear a soft snap sound as the filter connects to the cap.
5. Make sure that the filter is properly connected to the cap. When properly connected, the filter does not fall out of the cap when the cap is lifted.
6. Fill the bottle with water.
7. Thread the cap (with filter) onto the bottle and rotate the cap clockwise to tighten. Do not over tighten the cap.
8. If the nozzle is not in the down position, push the nozzle down toward the cap. Squeeze the bottle to test for a proper seal between the cap and the bottle. If you detect air or water leaking from between the cap and bottle, unscrew the cap and repeat steps 7 and 8 until no air or water leaks upon squeezing.
9. Pull the nozzle up. Over a sink or other appropriate drainage area, hold the bottle nozzle-side-down and squeeze to release water.
10. Continue to release water until the wriggle is empty. This process rinses out any harmless residual carbon particles from the filter and makes it ready for use. These residual carbon particles may initially color the water black. This step is only required the first time the filter is used.
11. Push the nozzle down, remove the cap, and refill the bottle with water. Tighten the cap onto the bottle, ensuring that there are no leaks between the cap and bottle.
12. The wriggle is now ready for use! Enjoy cleaner, more healthful water with every squeeze and sip!

Instructions for Filter Replacement

1. Push the nozzle down and unscrew the cap from the bottle.
2. Pull the filter from the cap and dispose of the filter.
3. Connect the new filter into the cap by pushing and rotating it into the cap. Make sure that the rounded filter end is toward the cap nozzle. You may hear a soft snap sound as the filter connects to the cap.
4. Fill the bottle with water.
5. Thread the cap (with filter) onto the bottle and rotate the cap clockwise to tighten. Do not over tighten the cap.
6. If the nozzle is not in the down position, push the nozzle down toward the cap. Squeeze the bottle to test for a proper seal between the cap and the bottle. If you detect air or water leaking from between the cap and bottle, unscrew the cap and repeat steps 5 and 6 until no air or water leaks upon squeezing.
7. Pull the nozzle up. Over a sink or other appropriate drainage area, hold the bottle nozzle-side-down and squeeze to release water.
8. Continue to release water until the wriggle is empty. This process rinses out any harmless residual carbon particles from the filter and makes it ready for use. These residual carbon particles may initially color the water black. This step is only required the first time the filter is used.
9. Push the nozzle down, remove the cap, and refill the bottle with water. Tighten the cap onto the bottle, ensuring that there are no leaks between the cap and bottle.
10. The wriggle is now ready for use! Enjoy cleaner, more healthful water with every squeeze and sip!

Instructions for Cleaning and Maintenance

1. Always remove the filter before washing the cap or bottle.
2. The wriggle cap and bottle are dishwasher safe (top rack only). They can be washed by hand or in the top rack of a dishwasher.
3. If you need to clean the filter housing, rinse with water ONLY.

What NOT to do with the wriggle

1. Do NOT use the wriggle with liquids other than water (e.g., coffee, fruit juice, iced tea, milk, soda, etc.).
2. Do NOT use the wriggle with carbonated water (e.g., seltzer water, soda water, etc.).
3. Do NOT use the wriggle with untreated water sources (e.g., river water, seawater, well water, etc.). The wriggle is intended for use ONLY with municipally-treated water.
4. Do NOT add drink mixes, powders, or other additives to the water (e.g., Multipure Vitatic).
5. Do NOT use the wriggle with hot water or any hot beverages.
6. Do NOT add solid objects in the wriggle, such as ice cubes or shaker balls.
7. Do NOT place the wriggle in the freezer.
8. Do NOT use the wriggle filter in the dishwasher or wash the filter with soap.

Warranty

Multipure 30-Day Guarantee: Multipure is confident in the performance of this product. If you should find the performance of your wriggle Portable Filtered Water Bottle unsatisfactory, let us know within thirty (30) days of purchase for a prompt exchange or refund.*

Multipure Warranty: Multipure Corporation warrants to the original retail customer the wriggle bottle housing and cap to be free of defects in material and workmanship for use under normal care, and will repair or replace any wriggle bottle housing and cap at no charge* to the customer during the warranty period. The wriggle bottle housing and cap are warranted for six (6) months.

Multipure wriggle filters are warranted for defects in material and workmanship for use under normal care, and will replace any wriggle filter at no charge* to the customer during the warranty period. The capacity of the filter cartridge depends upon the amount of impurities in the water to be processed. The wriggle filter is warranted for fourteen (14) days.

Except as otherwise expressly provided above, Multipure Corporation makes no warranties, express or implied, arising by law or otherwise, including without limitation the implied warranties of merchantability and fitness for a particular purpose, to any person. This limited warranty may not be altered, varied, or extended except by a written instrument executed by Multipure Corporation. The remedy of repair or replacement as provided under this limited warranty is exclusive. In no event shall Multipure Corporation be liable for any consequential or incidental damages to any person whether occasioned by negligence of the manufacturer, including without limitation damages of loss of use, cost of substitution, property damage, or other monetary loss.

Warranty is valid only if the wriggle Portable Filtered Water Bottle is operated within conditions listed herein. The warranty begins from the date of purchase.

*Exchanges, refunds, repairs, or replacements do not include return shipping fees to Multipure Corporate Headquarters.

The wriggle has not been tested and makes no claims for the reduction of contaminants of health concern.

7251 Cathedral Rock Drive, Las Vegas, NV 89128
702.360.8880 • 800.622.9206

www.multipure.com